

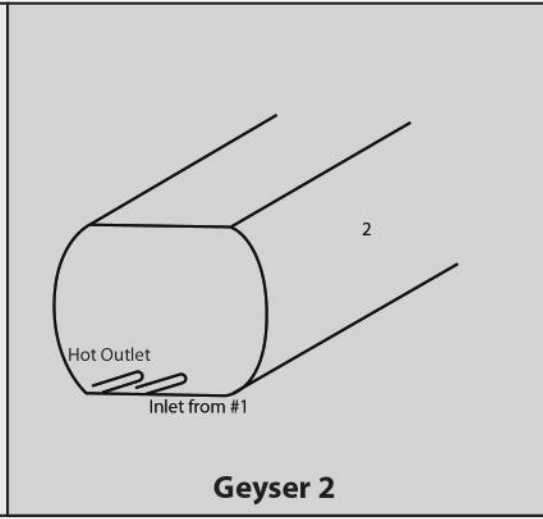


Fittings

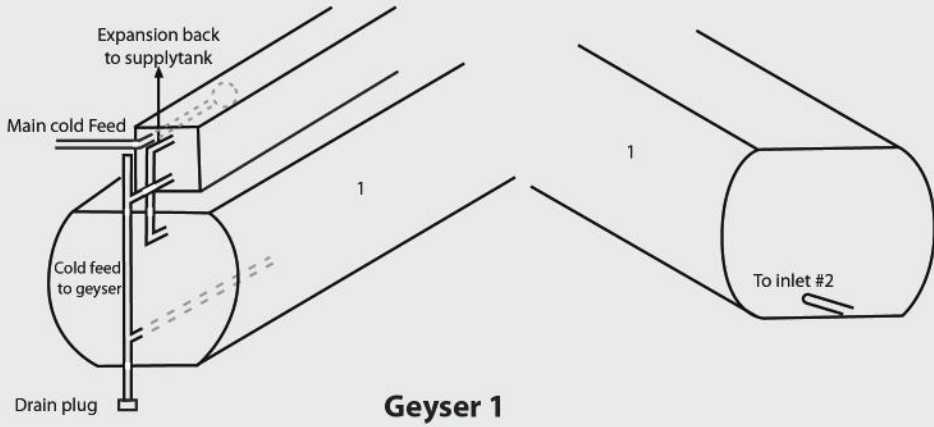

Pipework

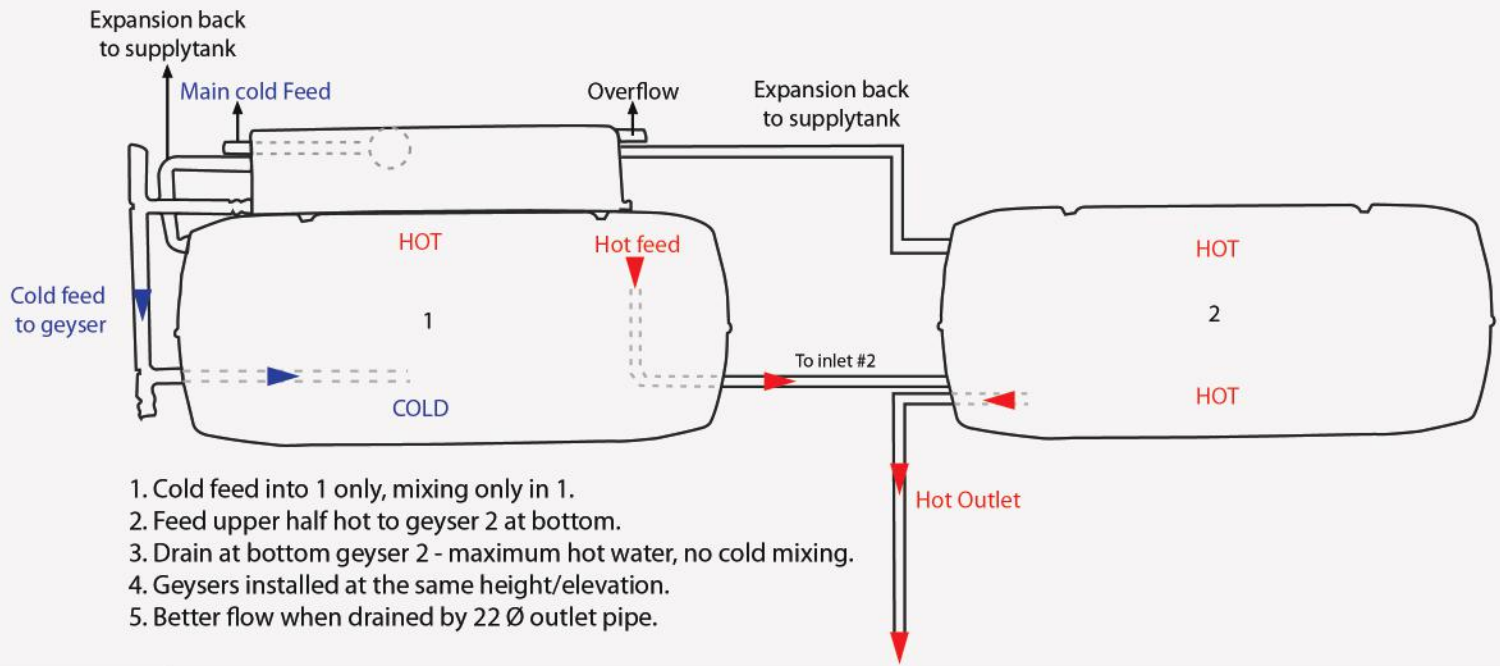

1. Cold feed into 1 only, mixing only in 1.
2. Feed upper half hot to geyser 2 at bottom.
3. Drain at bottom geyser 2 - maximum hot water, no cold mixing.
4. Geysers installed at the same height/elevation.
5. Better flow when drained by 22 Ø outlet pipe.

Direct Solar Water Heating Diagram

